







## Remote Control

No.	Key	Description
1		Switches on / Standby
2		Volume / Mute
3	0-9	Numerical input (A-Z); 0: Sleep timer
4	TV/SAT	Switches between TV and satellite mode
5	VOL-/+	Decreases/increases volume
6	P- / P+	With active channel list: switches between the channel lists.
7	EXIT	Exits menu / removes display messages
8		Cursor key, increases volume in normal mode
9	EPG	Electronic Programme Guide
10	TIMER	Invokes timer menu, blue function key
11	-	Without function
12	FIND	Searches channel by name
13	AUDIO	Audio track
14	PVR	PVR functions
15	SUBT	Enables/disables subtitles (if offered)
16	INFO	Invokes channel parameters
17	-	Without function
18	V-FMT	Aspect ration selection, red function key
19	FAV	Shows favourites lists
20		Cursor key, switches channel in normal mode
21		Cursor key, decreases volume in normal mode
22	OK	Confirms your inputs (menu, etc.), invokes channel list
23	TEXT	Shows video text (makes it transparent)
24		Cursor key, switches channel in normal mode
25	MENU	Invokes menu / returns to the previous menu level
26	RECALL	Switches to the previously watched channel
27	CH-/+	Switches to the last / next channel
28	TV/ RAD	Switches between TV and radio mode

Digital Satellite Receiver

# **SL 100HD PVRready 2CI**

Operating manual



Modifications and errors reserved.

We do not assume any liability for printing errors.

Version 1.0 DE, 23/09/2008

Dear customer,

Having in mind an environmentally friendly behaviour we ask you to switch off your receiver after usage by operating the mains switch at the rear side of the device.

With this, you contribute to the protection of the environment and save money.

## Preface

This operating manual will help you in the

- appropriate
- safe and
- favourable

use of the digital satellite receiver, in short, the “receiver”.

We assume that the user of the receiver has overall knowledge regarding the handling of audio and video equipment.

Each person who

- installs,
- connects,
- operates,
- cleans
- disposes of

this receiver must be familiar with the entire content of this operating manual. Always keep this operating manual in the proximity of the receiver.

## Style features

Specific style features have been used in different sections of the operating manual. Thus, you can easily differentiate whether it concerns

normal text,

- enumerations

or

• actions

---

# Contents

Remote control.....	1
<b>Preface .....</b>	<b>3</b>
<b>Style features.....</b>	<b>3</b>
<b>Contents.....</b>	<b>4</b>
<b>Safety instructions.....</b>	<b>5</b>
Basic safety instructions .....	6
Explanation of safety instructions .....	10
Appropriate use .....	10
<b>Scope of supply .....</b>	<b>11</b>
<b>Description.....</b>	<b>12</b>
<b>Connecting the receiver .....</b>	<b>16</b>
LNB cable installation.....	17
Connection with the SCART cable.....	19
Connection with the HDMI cable.....	21
Connection with the YUV component cable (YPbPr components).....	23
Connection with the Cinch cable.....	26
Connection of an audio-digital receiver .....	28
Connection and rough direction of the antenna .....	30
<b>Getting started.....</b>	<b>35</b>
Remote control.....	35
The receiver .....	37
<b>Operation .....</b>	<b>38</b>
Screen display messages when switching channels .....	38
User interface on the TV screen .....	39
Menu structure .....	40
Menu navigation.....	42
Editing channel list (symbol: TV).....	43
Installation (symbol: satellite antenna).....	49
System setup (symbol: gearwheel).....	57
Settings (symbol: tools).....	62
Games (symbol: game pieces) .....	71
External memory (symbol: film reel) .....	72

---

<b>Keys with special functions</b> .....	<b>76</b>
Switching between TV and radio .....	76
0 - Sleep timer.....	76
Switch between TV and SAT .....	76
CH- / CH+.....	77
VOL+ / VOL-.....	77
MENU.....	77
RECALL .....	77
P+ / P- .....	77
TEXT .....	77
EXIT .....	78
OK.....	78
◀ / ▶ .....	78
▲ / ▼ .....	78
FAV .....	78
EPG.....	79
V-FMT .....	81
TIMER .....	81
INFO - acoustic signal for directing the satellite antenna .....	81
SUBT.....	82
AUDIO.....	82
FIND.....	82
<b>Keys with PVR functions</b> .....	<b>83</b>
<b>Editing of recorded programmes</b> .....	<b>85</b>
<b>Cleaning</b> .....	<b>86</b>
<b>Tips &amp; tricks/trouble shooting</b> .....	<b>87</b>
<b>Disposal</b> .....	<b>91</b>
<b>Specifications</b> .....	<b>92</b>
<b>Manufacturer</b> .....	<b>94</b>
<b>Guarantee</b> .....	<b>96</b>
<b>Declaration of conformity</b> .....	<b>97</b>
<b>Glossary</b> .....	<b>98</b>

## ??Safety instructions

Please read the safety instructions carefully before operating the receiver.

---

Please follow all warnings and instructions on the equipment and in the operating manual.

## **Basic safety instructions**

### **Electrical connection**

- Separate the receiver from the power source in case of operational disruptions. Please note: The receiver will remain live, even if it is turned off with the mains switch on the rear side.
- Do not expose the receiver to rain or any kind of humidity to avoid risk of fire and electric shock.
- Never open the casing. Otherwise, there is a risk of electric shock.
- Connect the receiver only to a professionally installed mains socket of 100–240 V~, 50–60 Hz.
- The total power consumption by the antenna connection of the receiver “LNB IN” must not exceed 300 mA.
- Pull out the mains plug from the socket if the equipment is not in use for a longer period of time. Only pull at the mains plug, not at the cable.
- In case of storms pull out the mains plug of the receiver from the socket.
- In case of a storm, loosen the LNB cable from the receiver.
- If foreign bodies or fluids enter the receiver, immediately pull out the mains plug from the socket. Ask a qualified person to check the equipment before

---

operating it again. Otherwise, there is a risk of electric shock.

- Ensure that the power source (socket) is easily accessible.
- Do not bend or crimp the mains cable.
- If the mains cable is damaged, the receiver must be repaired by an expert before reusing it. Otherwise, there is a risk of electric shock.
- Never allow children to operate the receiver or to play with the antenna unit unless supervised.
- Always ask qualified personnel to carry out maintenance jobs. Otherwise, you are putting yourself and others at risk.
- Disconnect the receiver from the power source in case of operational disruptions.
- Spare parts must be ordered directly from the manufacturer
- Modifications of the device lead to an extinction of the manufacturer's liability.
- Remove the protection films.



### **Caution!**

Information on separation from power source. The Standby key of this device will not separate the device completely from the power source. In addition, the device will draw current. To separate the device completely from the power source, the mains plug must be pulled out of the socket.

---

## **Suitable location**

- Place the receiver on a stable and even base.
- Avoid proximity to:
  - heat sources, like e. g. heaters,
  - naked flames, like e. g. candles,
  - devices with strong magnetic fields, like e.g. loudspeakers.
  - Never place receptacles filled with liquid (e. g. vases) on the receiver
- Avoid direct sunlight and places with an extremely high amount of dust.
- Never cover ventilation slits. Ensure adequate ventilation of the receiver.
- Do not place any heavy objects on the receiver.
- Humidity may settle in the receiver if it is brought into hot surroundings from a cold one. In this case, wait for about an hour before operating the equipment.
- Arrange the mains and antenna cable in such a manner that no-one steps or trips over them.

## **Correct battery handling**

- Batteries may contain toxic agents. Ensure that batteries are not within the reach of children. Children may eat and swallow batteries. Should a battery be swallowed, immediately seek medical attention.
- Batteries that are getting discharged may damage the remote control. If the receiver is not in use for a longer

---

period of time, remove the batteries from the remote control.

- Batteries may contain toxic agents. Therefore, dispose of the batteries immediately in an ecologically accepted manner according to the prevailing statutory regulations. Never throw the batteries into normal household waste.
- Never expose the batteries to open fire or strong heat, as otherwise there is a danger of explosion.
- Replace the batteries always by batteries of the same type.

---

## Explanation of safety instructions

The following categories of safety instructions are included in this operating manual:



### **Danger!**

Instructions with the word DANGER give a warning against possible personal injuries.



### **Caution!**

Instructions with the word CAUTION give a warning against possible material or environmental damages.



These instructions contain special information regarding an economic use of the receiver.

## Appropriate use


The receiver is designed for receiving unencrypted (free-to-air) and encrypted digital satellite channels (depending on the inserted smart card with CI module, not included in the scope of supply) for private use. It is exclusively meant for this purpose and must only be used for the same. This also includes paying attention to all information contained in this operating manual, especially in the safety instructions.

Any other usage is considered to be improper and may lead to material damages and even personal injuries. Moreover, it will result in the immediate loss of guarantee. The manufacturer does not bear any liability for damages caused due to improper use.

---

## Scope of supply

Check the scope of supply after purchase. The scope of supply may vary according to the type of the receiver. Please follow the information on the packaging.

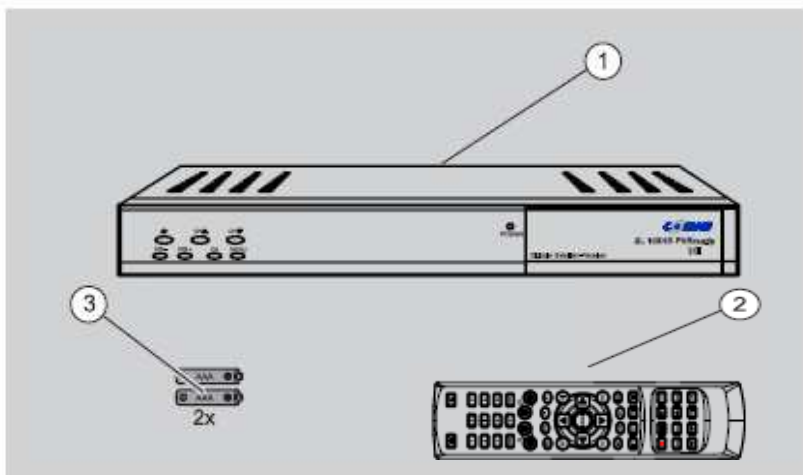

No.	Pieces	Description
1	1	Receiver
2	1	Remote control
3	2	Batteries type LR 03/AAA/1.5 V
	1	Operating manual (not shown above)

---

## Description

With this receiver, you can receive unencrypted (free-to-air) and encrypted digital satellite channels (depending on the inserted smart card with CI module, not included in the scope of supply) via satellite antenna for private use.

**It is not necessary to programme the receiver yet. The most important broadcasting stations and satellites have been pre-programmed.**

The satellite antenna has to be directed towards the desired satellite.

The receiver will scan for further new channels as soon as you initiate the automatic scanning of broadcasting stations for this satellite. Satellites not preset may be added.

All receiver settings can be done easily using the user interface (menu) on the TV monitor.

The multilingual user interface supports following languages:

- German
- Italian
- Spanish
- Portuguese
- Turkish
- Polish
- Croatian
- Czech
- Danish

- 
- Greek
  - Hungarian
  - Norwegian
  - Slovenian
  - Slovak
  - Swedish
  - Dutch
  - English
  - French

**The following satellites have been preset by the company:**


- ASTRA1 19.2°E
- Hotbird 13.0°E
- Türksat 42°E
- ASTRA1 28.2°E
- Sirius2 5.0°E
- Amos/Atlantic 4-5°W
- HispaSat 30°W
- Eutel W2 16°E
- HellasSat 39°E
- ASTRA 23.5°E

**Other features of the equipment:**

- HDTV & SDTV
- Upscaling of SDTV channels (if offered by the channel)
- Software update via satellite ASTRA1 19.2°E or the USB interface.
- Programmes recorded with encryption can be watched decrypted by inserting the corresponding CI module and smart card.

- 
- Saves the channel last watched (Last Station Memory)
  - LNB control logic (sound 0/22 kHz), max. current delivery for LNB 300 mA
  - Symbol rate 1-35 MS/s and 950-2150 MHz input frequency
  - 7 keys at the frontage
  - plug & play
  - The power draw in standby mode is approx. 3W.
  - mains connection 100–240 V~, 50/60 Hz
  - 4500 channel storage locations
  - Child lock (preset password: 0000)
  - 8 favourites lists
  - Automatic scanning of broadcasting stations
  - List editor for broadcasting stations
  - Analogue sound output through Cinch connector (stereo), volume adjustment possible via remote control
  - AC3 coaxial digital audio output
  - 2 Euro-SCART connections for TV and video set (TV & VCR)
  - TV SCART output with CVBS und RGB assignment
  - HDMI output
  - YPbPr output
  - Super fast videotext with a memory of 800 pages
  - Digital radio reception, background image for radio (background display)
  - Additional channel information is displayed when the channel is changed.


- 
- DiSEqC 1.0, 1.2, USALS is supported if an appropriate antenna unit is connected
  - SWAP function (via Recall key)
  - Screen aspect ratios can be set to 4:3, 16:9, and automatically (letterbox)
  - 8x multi-functional timer linked with EPG, sleep timer
  - Electronic Programme Guide EPG (up to 16 days in advance, channel-dependent)
  - SCPC/MCPC reception standard C/Ku-band satellites
  - Automatic selection of the TV standard with video converter
  - Digital satellite finder for optical and acoustic adjustment of the paraboloidal-type reflector

 A suitable channel editor is additionally available through our hotline. Then you will be able to edit the channel lists of the receiver using your computer. Please read the information on our website [www.comag-ag.de](http://www.comag-ag.de) for this purpose.

---

## Connecting the receiver

The receiver is connected with your satellite antenna by means of a coaxial cable. If necessary, you have to prepare a coaxial cable before connecting the receiver.

-  The coaxial cable is not included in the scope of supply.



### Caution!

Connect the receiver to the mains supply only after you have connected it to all equipment and the antenna properly. Otherwise, the receiver can suffer damages.



### Caution!

Information on separation from power source. The Standby key of this device will not separate the device completely from the power source. In addition, the device will draw current. To separate the device completely from the power source, the mains plug must be pulled out of the socket.

The wire netting and the inner core of the coaxial cable carry current during operation.



### Danger!

Connect the receiver to the mains supply only after you have connected it to all equipment and the antenna properly. Otherwise, there is a risk of electric shock that can be a threat to life or physical condition.

---

## LNB cable installation

(cp. installation diagram on the next page)

For the installation of the F connector on the coaxial cable you will need a knife (ideally a wire stripper) and side cutting pliers.

- ❗ When stripping the isolation, neither the inner core or the foil nor the wire netting must be damaged.
- ✂ Cut 8 mm of the coaxial cable at each end up to the inner core.
- ✂ Carefully cut 10 mm of the outer insulation so that the wire netting is exposed.
- ✂ Turn the wire netting backwards and wind it over the outer insulation in such a manner that it does not touch the inner core.
- ✂ Remove the inner insulation together with the foil placed over it up to 2mm before reaching the wire netting.




### Caution!

The wire netting and the foil must not touch the inner core. The foil must enclose the inner insulation and must not be damaged.

- ✂ Rotate the F connector onto the turned-back wire netting until the connector touches the inner insulation.
- ❗ The wire netting must not protrude from the back of the connector end.
- ✂ Cut the inner core with a cable cutter in such a manner that it projects maximum 1 mm from the connector.

---

## Installation diagram

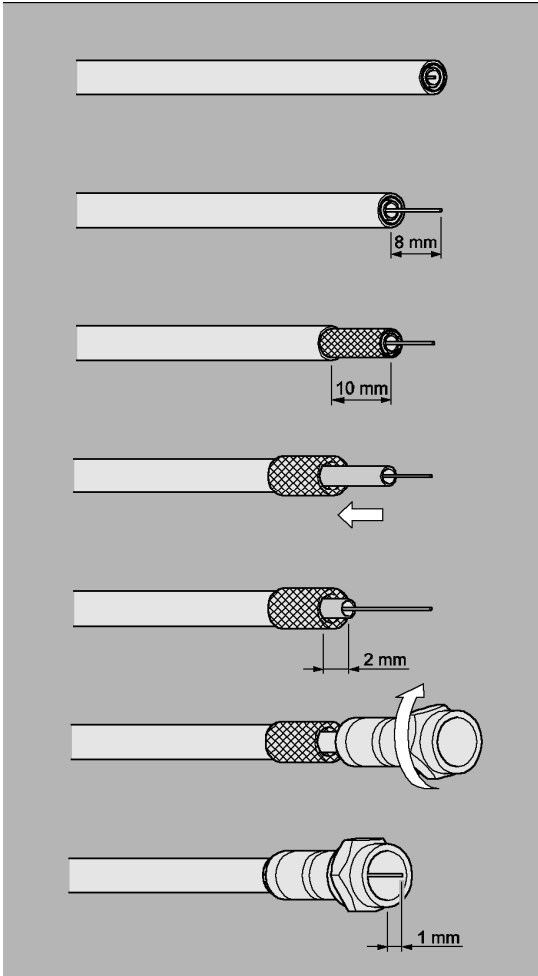


- ø Fasten the F connector of the coaxial cable onto the “LNB IN” antenna connection of the receiver. Fasten the other end of the coaxial cable on the LNB.

---


## Connection with the SCART cable

- ð Insert the SCART cable in the SCART socket “TV” of the receiver.
- ð Connect the SCART cable to the TV set. Follow the operating manual of the TV set.
- ð Insert the Scart cable in the Scart socket “VCR” of the receiver if you want to connect a video set.
- ð Connect the SCART cable with the video set. Follow the operating manual of the video set.
- ð Insert the Cinch connector of the Cinch cable in the “AUDIO-R” and “AUDIO-L” sockets of the receiver if you want to connect a stereo system.

 The Scart cable is not included in the scope of supply.

---


## Connection diagram

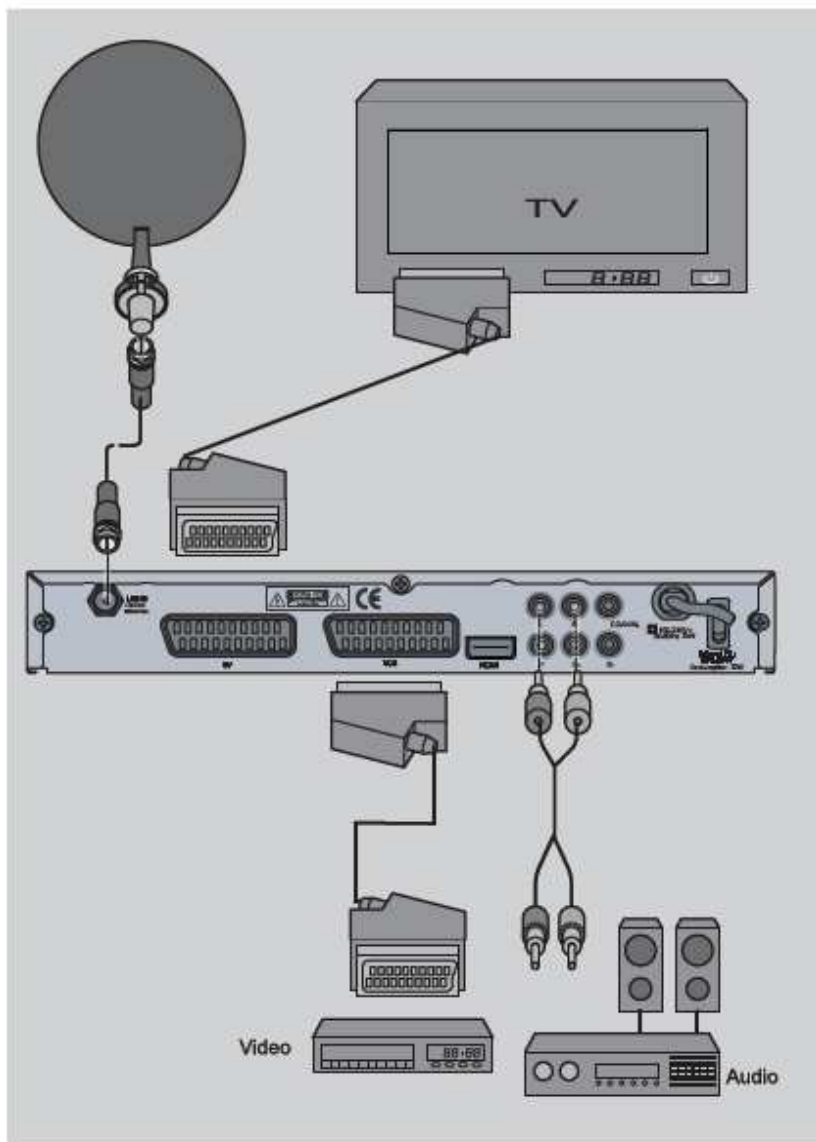


---


## Connection with the HDMI cable

- ǒ Insert the HDMI cable in the HDMI socket “HDMI” of the receiver.
- ǒ Connect the HDMI cable to the TV set. Please follow the operating manual of the TV set.
- ǒ Insert the Scart cable in the Scart socket “VCR” of the receiver if you want to connect a video set.
- ǒ Connect the SCART cable with the video set. Follow the operating manual of the video set.
- ǒ Insert the Cinch connector of the Cinch cable in the “AUDIO-R” and “AUDIO-L” sockets of the receiver if you want to connect a stereo system.

 Please note that the Scart and the HDMI cable are not included in the scope of supply. It is impossible to operate the receiver simultaneously via the Scart and the HDMI connection. You will have a signal either at the Scart or the HDMI output.

 The operation of a video device connected to a VCR Scart connection is not possible via the HDMI connection.

## Connection diagram

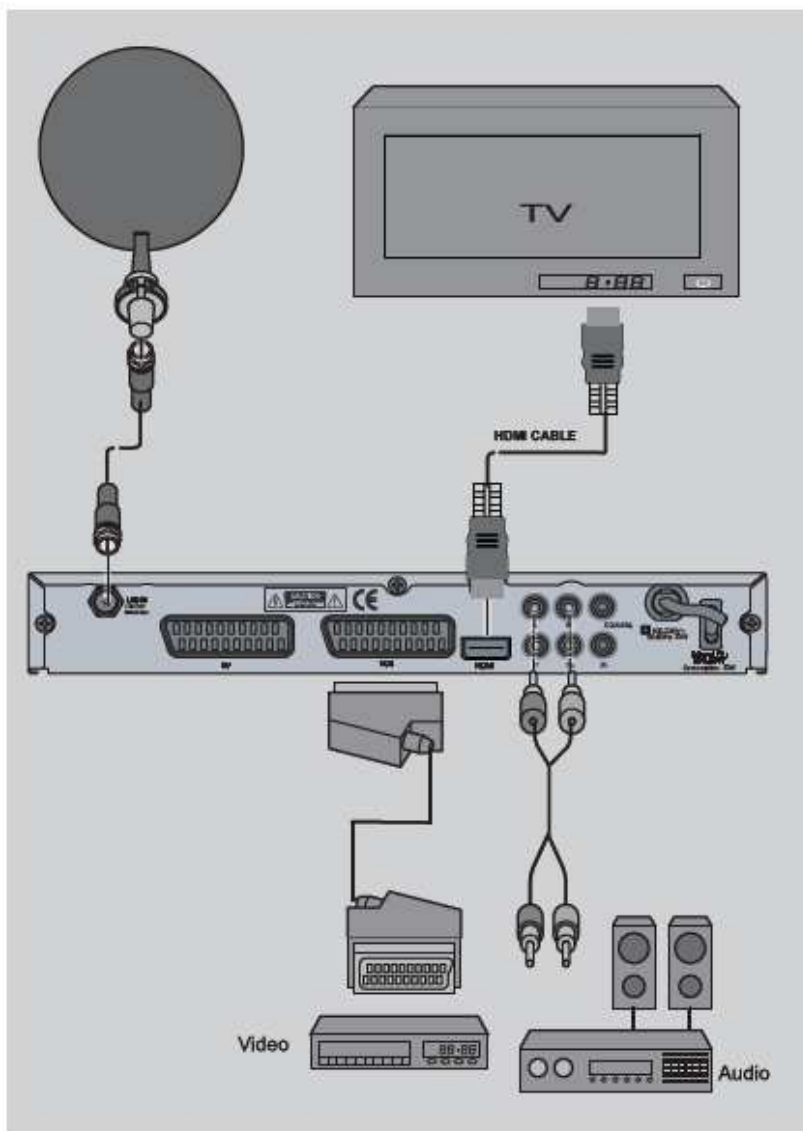


---

## Connection with the YUV component cable (YPbPr components)

If you own a TV set with YUV connections (YPbPr components), you can connect it via the YPbPr components output of the receiver. For this purpose, you will need a YUV components cable (YPbPr).

ð Connect the plug of the YUV component cable to the corresponding sockets of the TV set.

 Follow the indications in the operating manual of the TV set.

ð Connect the plug of the YUV component cable to the correspondingly coloured YPbPr sockets of the receiver.


ð Connect the SCART cable to the SCART socket "VCR" on the receiver if you want to connect a video set.

ð As the YUV component cable does not send an audio signal to the TV set, you must connect your receiver with a stereo system to hear the tone. For this purpose, use a Cinch cable and insert the Cinch connector in the "AUDIO-R" and "AUDIO-L" sockets of the receiver.

Alternatively, you can also connect an audio digital receiver to your receiver to get a 5-channel audio transmission. Use the coaxial digital audio output "COAXIAL" for this purpose. The corresponding connection diagram can be found on the following pages.

- 
- ① The YUV component cable, the Cinch cable and the coaxial audio cable are not included in the scope of supply.
  - ① Follow the indications in the operating manual of the video recorder.
  - ① This YUV component output is a high-quality output especially made for flat screens, plasma TV sets or beamers. Follow the indications in the operating manual of the connected devices.

## Connection diagram

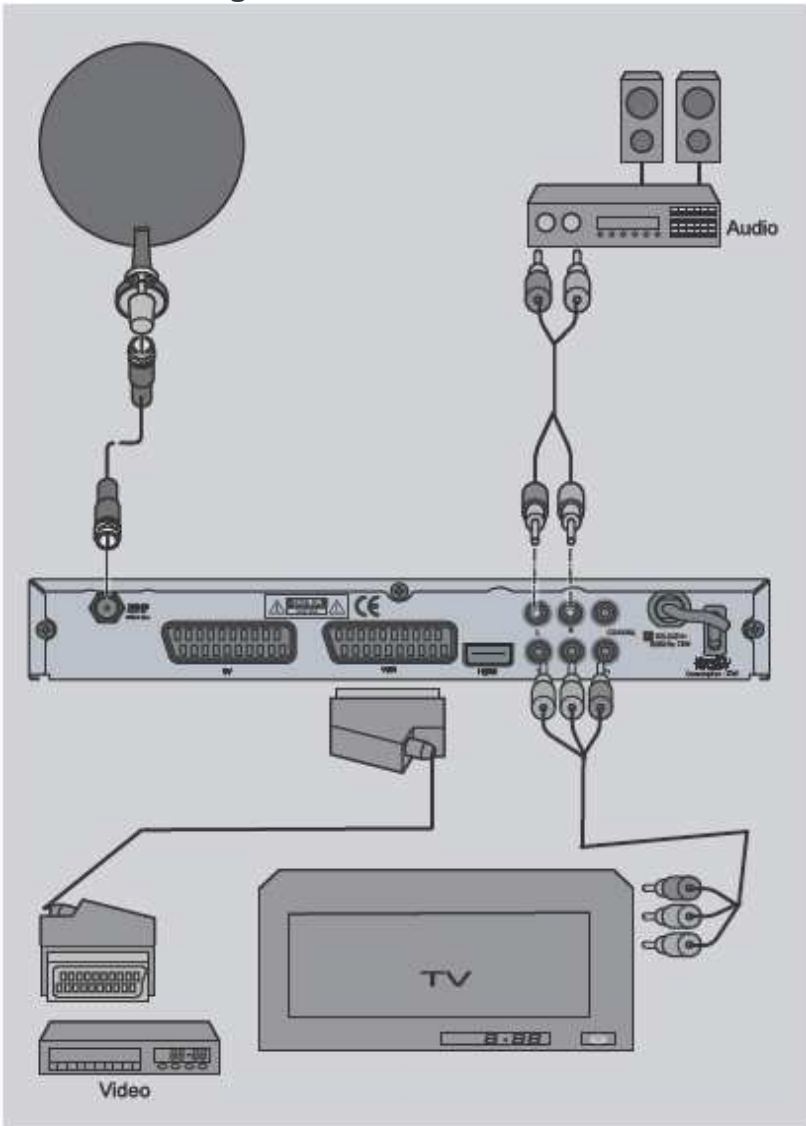

---

## Connection with the Cinch cable

To reproduce sound via your stereo equipment connect it with a Cinch cable with the receiver.

- Connect the “AUDIO R” and “AUDIO L” sockets of the receiver to the audio inputs of the stereo system.



### Caution!

Never connect the Phono input of your stereo system to the receiver; it may damage your stereo system.

Strictly follow the instructions for connecting the Cinch cable given in the operating manual of your stereo system.




The Cinch cable is not included in the scope of supply.

- When using the digital radio function of your receiver you do not need to switch on your TV set. The sound output is made via the connected stereo system. Just for selecting the radio station you will need your TV set for better orientation.

---

## Connection diagram

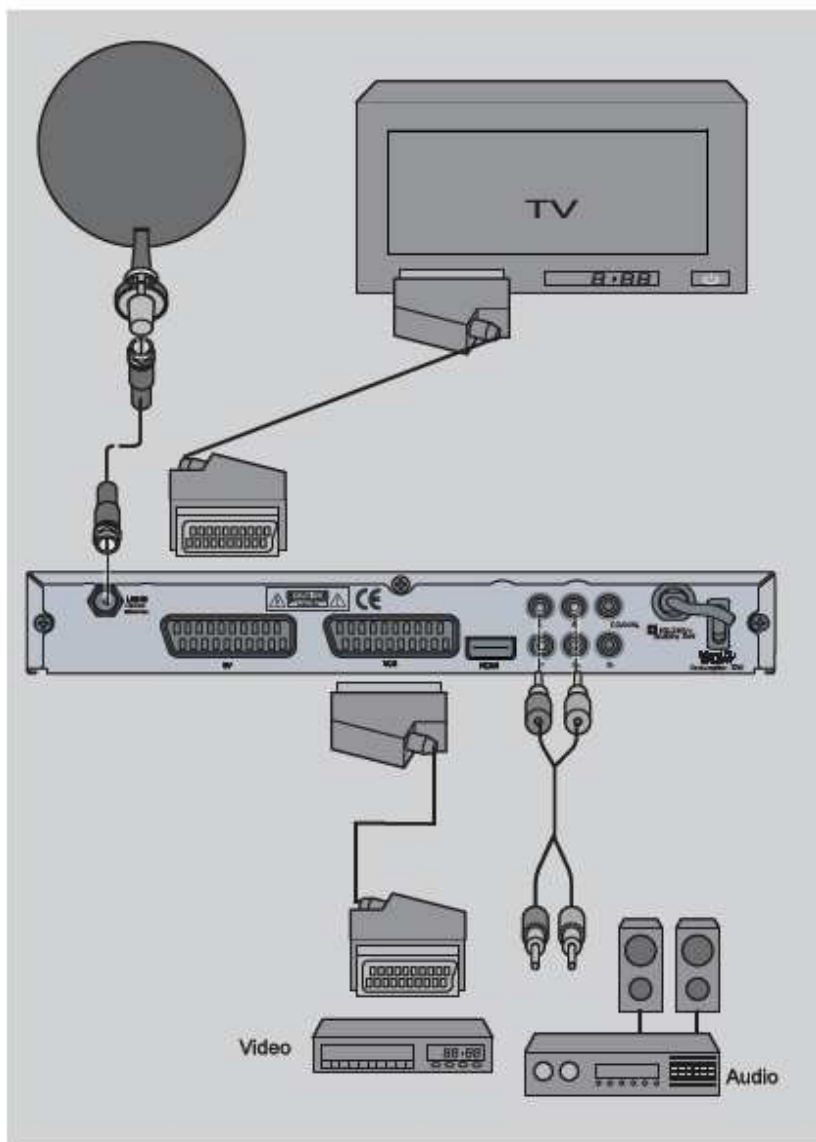

---

## Connection of an audio-digital receiver

If you want to use 5-channel audio transmission (Dolby digital sound/AC3), you must connect your audio-digital receiver to the coaxial output of the receiver.





### Caution!

Never connect the Phono input of your stereo system to the receiver; it may damage your stereo system. Strictly follow instructions for connecting the Cinch cable given in the operating manual of your stereo system.



### Caution!

Please follow strictly the information regarding connection in the operating manual of your audio-digital receiver.


-  The coaxial cable is not included in the scope of supply.
-  Your TV set need not be switched on for radio reception.  
You must switch on the TV set if you want to receive TV sound through your stereo system.

---

## Connection of the coaxial digital output

- ǒ Insert the coaxial cable in the “COAXIAL” socket of the receiver.
- ǒ Connect the coaxial cable to the audio-digital receiver.
- ǒ Enable the digital audio output of the receiver in the menu item "System Settings – TV system".


## Connection diagram

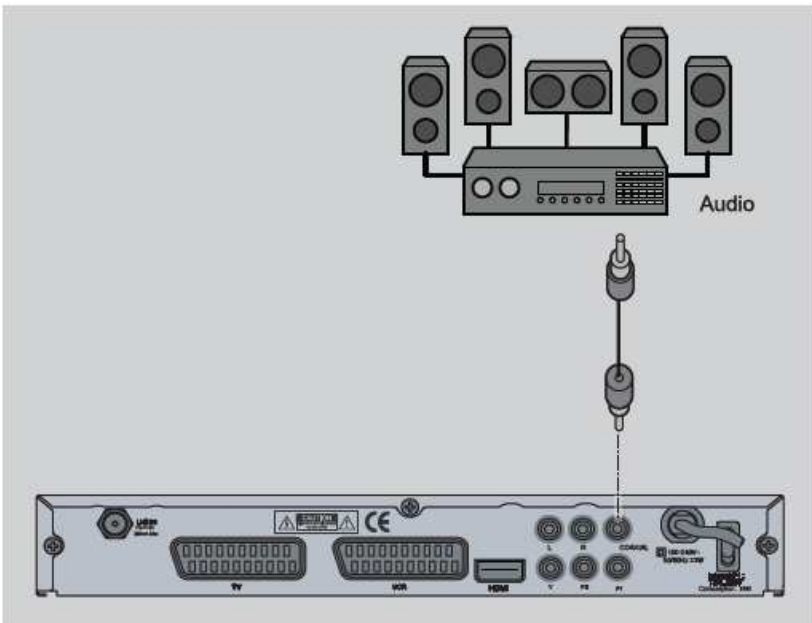

---

## Connection and rough direction of the antenna

You must connect the antenna cable to the LNB before directing the antenna.

-  Please follow also the instructions in the operating manual of your satellite antenna.




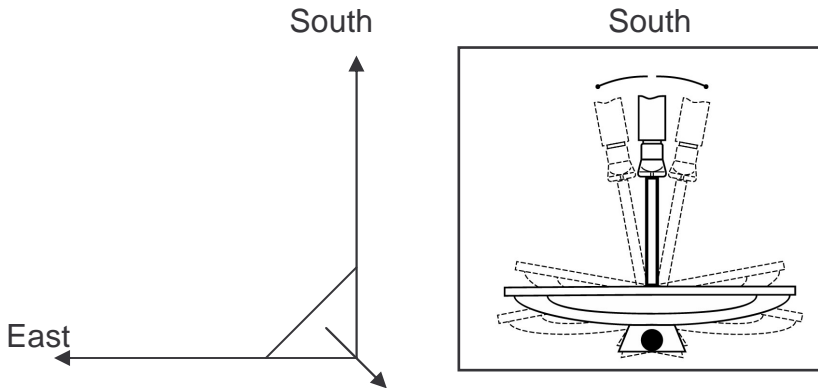
### Caution!

The receiver should only be connected to the power supply after you have connected the antenna cable to the receiver.

- Screw the F plug to the LNB connection.

If you have not mounted and directed your satellite system yet, you must first find a suitable location for mounting the antenna. Please make sure that the antenna is directed towards the south-east. This means, you must have a free view in this direction when you stand behind the antenna. Keep in mind that the antenna must never be mounted behind a balustrade, a handrail or other obstacles (such as trees).

-  When searching the southern direction, the position of the sun might help you. During summer time, the sun is exactly in southern position at 12 am noon and during winter at 1 pm.



You must have this view when standing behind the antenna.

In this angle of  $90^\circ$  nearly all common satellite positions, such as ASTRA1  $19.2^\circ$  E, Eutelsat Hotbird  $13^\circ$  E, and Türksat  $42^\circ$  E, can be found.

Depending on which satellite you wish to receive, there must be free sight without any obstacles in this angle. This must especially be ensured with an installation on a wall. Make sure that you can turn your antenna completely without having contact with the wall of your house before installing a corresponding wall bracket (not necessarily included in the scope of supply).

After having made all relevant connections you can now start with the setup of the antenna. Please check again that the receiver is connected with the LNB of the antenna and the receiver with your TV set. As soon as these cable connections have been made correctly, you can switch on the devices.

---

### **First step:**

Switch on your TV set. Please make sure that your TV set has been adjusted to the receiver. In case of a Scart connection, the TV set must be set to the correct AV channel.

### **Second step:**

Switch on the receiver. Please ensure that the receiver has been preset for the most common satellites and their channels and that you just have to enter the channel locations via the numeric keys of the remote control of the receiver.

### **Example:**


If you wish to receive the satellite ASTRA1 19.2° E, you must set your receiver to channel location 1 for directing the antenna. The same applies also for other satellites, such as Hotbird. If you wish to direct your antenna to Hotbird, just call a preset channel of Hotbird with your receiver.

### **Third step:**

Now, direct your antenna to the satellite you selected. You have several options to do so. The easiest and most cost-effective solution is the following way:


Stand behind the antenna and move the antenna completely into vertical position (see picture B). Make sure that the receiving component of the antenna is directed towards the south (see picture A).

South

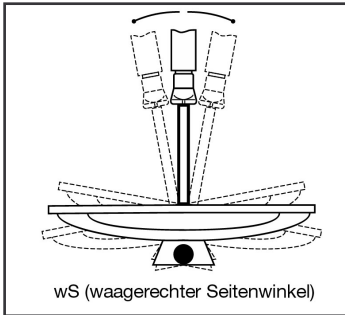

Picture A


haa = horizontal azimuth angle

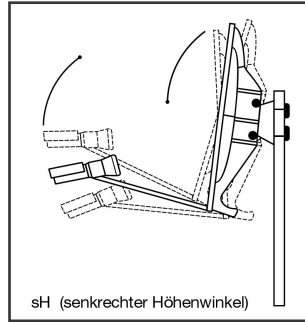

Picture B

vea = vertical elevation angle

Now, turn your antenna slowly towards the east (to the left) while observing the TV set, until the receiving component points exactly towards the east, i.e. rotate by  $90^\circ$  (see following picture).

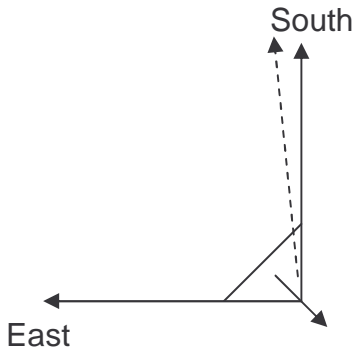

In case of digital satellite reception, the receiver receives the transmission signal with a time lag. Therefore, turn the antenna very slowly and wait at each position for some seconds until the receiver shows the signal strength on the screen menu.

---

Now, move your antenna in such a way that it will become steeper by 1°. For this purpose, pull at the top of the antenna. Now, return the antenna slowly to its initial position towards the south. Now, turn the antenna once again 1° steeper and move it again to the left in eastern direction. Repeat these steps until the vertical elevation angle crosses the horizontal azimuth angle, e.g. for ASTRA1 at 19.2° east, and you are receiving the set channel on your TV set.

Now, please check again if you are receiving the channel set on the receiver and zap through the channels with the CH▲ and CH▼ keys of the receiver or by using the remote control.

As soon as you have found the desired satellite, you should improve the direction of the antenna until you get a clear image on all channels. You can achieve this by an optimum adjustment of the vertical elevation angle and the horizontal azimuth angle. (see pictures A and B). Please use also the indication of the signal strength and signal quality by pressing the INFO key.

Finally tighten all screws thoroughly to make sure that the direction of your antenna cannot change anymore.

---

## Getting started

### Remote control

For the remote control two Micro type batteries LR 03/AAA/1.5V are required.

• Open the battery compartment.



• Insert two batteries according to the polarities mentioned into the battery compartment.



• Push the cover of the battery compartment carefully - until the cover is locked.

- 
- ǒ Replace discharging batteries on time. Otherwise, the sending capacity of the remote control will be too low.
  - ǒ Always replace both batteries simultaneously and use batteries of the same type.
  - ǒ Check the batteries of your remote control at least once a year.
  - ǒ If one battery has leaked, wear protective gloves and clean the battery compartment with a dry cloth.



### **Caution!**

Batteries may contain toxic agents that are hazardous to health and environment. Therefore, dispose of the batteries in any case according to the prevailing statutory regulations. Never throw the batteries into normal household waste.

The remote control transmits infrared signals to the receiver. Please refer to the overview of the remote control for the functioning of the keys.

- ǒ Point the remote control towards the front side of the receiver and slightly press the corresponding key once.

---

## The receiver



### Caution!

Check that connections of all equipment and the antenna are proper before connecting the receiver to the mains.

- ǒ Insert the mains plugs of the connected equipment in the mains socket and switch it on.
- ǒ Switch on the AV channel of the TV set. If the TV set recognizes the switching voltage emitted by the receiver, it will switch automatically to the AV mode (with Scart).
- ǒ Insert the mains plug of the receiver in the mains socket. Turn on the mains switch on the rear side of the receiver. The device is in normal mode. The current channel location will be displayed.

The receiver is supplied with preset TV channels and can be used directly. If you want to check if new channels are available, initiate a scan for broadcasting stations. Read the information further below for this purpose.



To get into standby mode, press the red key at top left of the remote control. The current time will be displayed. The device consumes approx. 2W only. Currently, this is a very low value of power consumption.

---

## Operation

### Screen display messages when switching channels

When a channel is switched, an information bar appears on the screen for 5 seconds.

In this information bar, you will find the following indications:

	Channel name
	Received satellite
	Current date
	Current time (according to the pre-setting in the menu item "Time")
	Storage location
<b>TXT symbol</b>	This symbol is displayed if the selected broadcasting station offers Teletext.
<b>EPG symbol</b>	This symbol is displayed if the selected broadcasting station offers an electronic programme guide.
<b>Heart symbol</b>	The heart symbol is displayed if you have included the channel in a favourites list.
<b>Info</b>	Information on the current "Now" and the following "Next" programme.
<b>Info</b>	Information on the currently active channel list

---

## User interface on the TV screen

You can do individual settings of your receiver using the menus in the user interface. For this purpose, both the receiver and the TV set need to be switched on and connected by a cable (e.g. SCART or HDMI).

Press the “MENU” key. The main menu will be displayed. By pressing the “EXIT” key or the “MENU” key again, you can exit this menu.

### Navigation within the menus

- Top (arrow 1): Menu name
- Left (arrow 2): Menu symbols
- Middle (arrow 3): Submenu items



---

## Menu structure

Main menu	Sub-menu	Description
Editing channel list (symbol: TV) Page: 43	TV channel list	see following pages
	Radio channel list	see following pages
	Delete all	see following pages
Installation (symbol: satellite antenna) Page: 49	Connection of the antenna	see following pages
	Satellite list	see following pages
	Setup of the antenna	see following pages
	Individual satellite scan	see following pages
	Multi-satellite scan	see following pages
	TP list	see following pages
System settings (symbol: gearwheel) Page: 57	Language	see following pages
	TV system	see following pages
	Setting of local time	see following pages
	Setting of the timer	see following pages
	PIN	see following pages
	OSD settings	see following pages
	Favourites	see following pages
	Other	see following pages

---

Settings (symbol: tools) Page: 62	Information	see following pages
	Default value	see following pages
	Updating software	see following pages
	Common Interface	see following pages
	USB	see following pages
	Save removal of USB device	
Games (symbol: game pieces) Page: 71	Tetris	see following pages
	Othello	see following pages
	Sudoku	see following pages
External memory (symbol: film reel) Page: 72	Recording manager	see following pages
	HDD information	see following pages
	HDD format	see following pages
	PVR setting	see following pages

---

## Menu navigation

Use the ▲, ▼, ► and ◀ keys to navigate within the menus. The selected menu items are marked. Confirm your selection with the “OK” key. By pressing the “EXIT” key you can exit the menu again. Changes must be confirmed additionally. Sometimes they will require a confirmation prompt.

### **Example: Setting the receiver to summer time.**

Press the “MENU” key, select "System settings", press the OK key, then go to "Time & timer setting", press the “OK” key, enter Local time and press the “OK” key again. Enable use of GMT with the ► and ◀ keys. Set the time zone according to your location in the menu item GMT Difference (Germany: “GMT + 01:00”). Set summer time with the ► and ◀ keys. Exit that menu by pressing the “EXIT” key.

---

## Editing channel list (symbol: TV)



Below you will find the description of the menu items of the main menu item "Editing channel list".

---

- **TV channel list**



Select the channel to be changed with the ▲ and ▼ keys. It will then be marked with a yellow bar. The current programme of the channel can be seen in the small window on the right.

The editing options can be enabled by pressing the following 5 keys:

- 1. FAV:** Press the FAV key of the remote control. The "FAV" box will be highlighted and enabled. Select the desired channel to be assigned to a favourites list and confirm by pressing the OK key. Now, assign the selected channel to the desired favourites list and confirm again by pressing the OK key. Now, the favourites group is check marked. Exit the selection of the favourites group by pressing the EXIT key. Now, the channel is marked with the heart symbol. Press the FAV key to

---

disable this function. When exiting the menu with the EXIT key, confirm the prompt to save the favourites.

**2. Lock:** Press the red function key of the remote control. The "Lock" box will be highlighted and enabled. Select the desired channel to be marked for locking and press the OK key. After entering your PIN, the channel will be marked with a lock. Now, you can select further channels and mark them for locking by pressing the OK key. Press the red function key to disable this function. When exiting the menu by pressing the EXIT key and confirming the prompt, the channels marked with a lock will be locked. Now, these channels can only be watched after having entered your PIN.

Please Note: In menu item "System settings – PIN" the option "channel lock" must be enabled. If it is disabled, the locks will be inactive until the option "channel lock" has been enabled again.

**3. Skip:** Press the green function key of the remote control. The "Skip" box will be highlighted and enabled. Select the desired channel to be skipped. After having pressed the OK key it will be marked with an arrow. Now, you can select further channels and mark them for being skipped by pressing the OK key. Press the green function key to disable this function. When exiting the menu by pressing the EXIT key and confirming the prompt, the channels to be skipped will be saved. When zapping, these channels will be skipped.

- 
- ❗ If the changes regarding FAV, Lock and Skip have been enabled by confirming the prompt, they can be undone in the same way as described above.

**4. Move:** Press the yellow function key of the remote control. The "Move" box will be highlighted and enabled. Now, select the desired channel to be moved by pressing the OK key.

- ❗ You can move several channels simultaneously.

Now select the desired target channel location with the ▲ and ▼. By pressing the yellow function key, the channels will be moved. When exiting the menu by pressing the EXIT key and confirming the prompt, the moved channels will be saved.

---

**5. Change:** Press the blue function key of the remote control. A new menu will open.



"ABC" box: Press the red function key. Now, the sorting filters of the channel list can be selected.

"Edit" box: Press the green function key. Now, the name of the current channel can be changed.

"Delete" box: Select the channels to be deleted and press the OK key. The channels to be deleted will be marked with X.

When exiting the menu by pressing the EXIT key and confirming the prompt, the changes made in these 3 boxes will be saved. You will return to the previous menu.

---

When exiting the menu item "TV channel list", confirm the prompt to save the changes made. If the prompt is not confirmed you will exit the menu without changes.

- **Radio channel list**

These functions are identical to those of the TV channel list.


- **Delete all**

After having entered your valid password and confirming the prompt, all saved TV and radio channels will be deleted.

By selecting the default setting, you can reset the factory-set channel lists.

---

## Installation (symbol: satellite antenna)

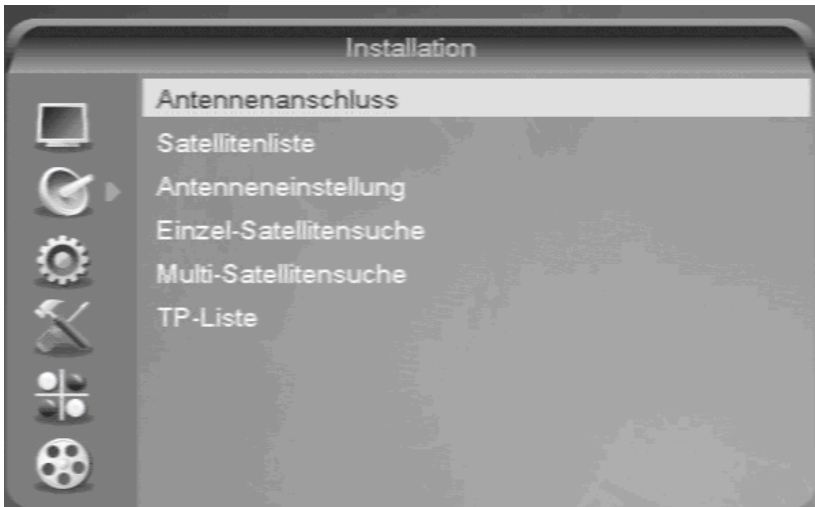

- **Connection of the antenna**

Here, you can define if you have your receiver connected to a fix antenna or an antenna with rotating motor.

- **Satellite list**

The list of all saved satellites will be displayed.

Now, you can enable or disable the desired satellites by pressing the OK key. They will be check marked.

- Edit (red function key): Editing of the satellite name and position. Important if you have a rotating antenna.

- 
- New (green function key): Manual addition of a satellite.
  - Delete (blue function key): Deleting of a saved satellite and its channels.

- **Setup of the antenna**

Instructions for the presetting "fix antenna"

- Satellite: Satellite selection. Here, all satellites enabled in the submenu "Satellite list" are listed. Select the satellite to be edited.
- LNB frequency: Set the corresponding LNB frequency for the selected satellite. The default setting is universal.
- Transponder: List of the programmed transponders.
- DiSEqC1.0: Setting for multi-satellite reception
- 22K: Will be set automatically by the receiver.
- Polarity: The default setting is "AUTO". However, you can define the horizontal or vertical LNB supply voltage.

Instructions for the presetting "motor antenna" (antenna with rotating motor)

- 
- LNB type: Set the corresponding LNB frequency for the selected satellite. The default setting is universal.
  - Motor type: Setting of the motor type.
  - Local length: Only for option "USALS" in the menu item motor type.
  - Local width: Only for option "USALS" in the menu item motor type.
  - Delete all: You can delete all satellite positions previously saved. Not available for option "USALS" in the menu item motor type.
  - Motor setting: Access to the DiSEqC1.2 control centre. Here, individual satellite positions can be saved.
  - Limitation: Definition of the rotation radius.

- **Individual satellite scan**

In this submenu, you can scan a complete enabled satellite for (new) channels.

- Satellite: Selection of the satellite to be scanned.
- Only for FTA: FTA = free-to-air channels. Option Yes = only free-to-air channels are scanned. Option No = encrypted channels are also scanned.

- 
- Scanned channels: Define if you wish to scan only TV channels, only radio channels or both.
  - Network scan: Intelligent scan. Only available if "Default setting for scans" has been selected in the next menu item.
  - Scan mode:  
Option "Automatic scan": The complete satellite will be scanned. No data required. Option "Default setting for scans": Only transponders already created will be scanned.
  - Scan: The scan will be started by pressing the OK key. The found channels are added at the end of the general satellite list.

- **Multi-satellite scan**

Here, you can scan all satellites enabled in the submenu item "Satellite list" at once. The setting of the scan filters is described in the previous submenu item.

---

- **TP list**

In this submenu, you can edit the transponders of the satellites enabled in the submenu item "satellite list".

- Edit (red function key): Editing of the parameters of the marked transponder. Please note that this change will have an influence on the channels of the edited transponder!
- New (green function key): Here, a new transponder not being saved yet can be created. Use this function to scan for a channel if you know the required details.
- Delete (yellow function key): Deleting of the marked transponder.
- Scan (blue function key): Scanning of the marked transponder for new channels taking into consideration the settable scanning filters.

---

### Example for the channel scan:

You are aware that new channels are broadcasted on a determined frequency.

Satellite: ASTRA 19.2° East - Frequency: 10836 MHz  
Symbol rate: 22.000 Ks/s - Polarity: Horizontal

Now, proceed as follows:

Submenu item TP list.

- ø Press the green function key of your remote control.  
The "New TP" box appears.
- ø Enter the frequency 10836 with the keys 0-9 of the remote control.
- ø Then, enter the symbol rate 22000 with the keys 0-9 of the remote control.
- ø Set the polarity H for horizontal with the ► and ◀ keys.
- ø Save the input by confirming the "Save" box with the OK key.



---

The newly created transponder will now be added to the end of the transponder list of the satellite ASTRA 19.2° East and appears correspondingly in the transponder list.




- Press the blue function key of your remote control. The "TP scan" box appears.
- Set the scan filters already described.
- Start the scan by confirming the "OK" box with the OK key.



- ø The found channels are added at the end of the general satellite list. The procedure is finished.

---

## System setup (symbol: gearwheel)

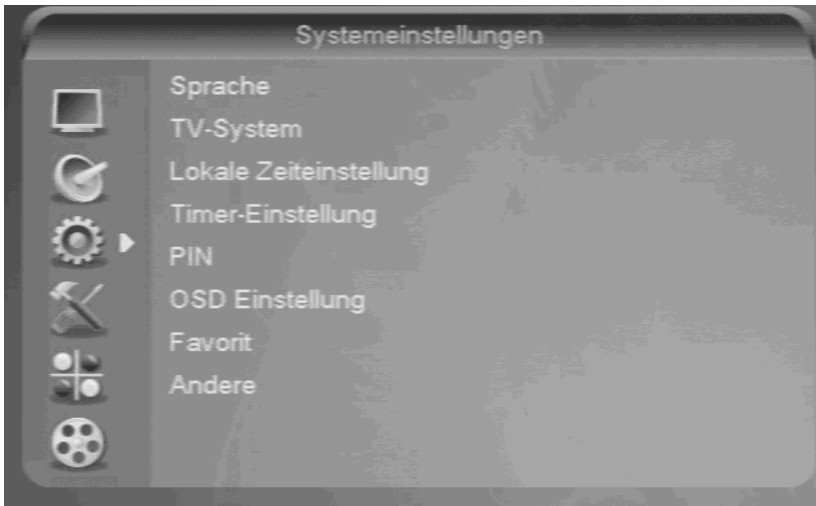

- **Language**
  - Language: Options of the OSD menu language
  - First audio channel: Preselection of the audio language (if offered by the broadcasting station)
  - Second audio channel: Preselection of the audio language (if offered by the broadcasting station)
  - Teletext: Letter options for Teletext

---

- **TV system**

- Video resolution: Selection of the maximum video resolution (default setting: 1080i\_25)



HDTV quality of HD channels: from 720p  
Used colour scheme in the item "Video signal":  
YUV  
Used connection: HDMI

- Aspect Ratio: 4:3 LB, 4:3 PS, 16:9, Auto (default setting: Auto)
- Video signal: Setting of the colour scheme. Here, YUV must be set to get the HDTV quality of HD channels.
- Screen settings: Personalisation of the image (brightness, contrast, saturation (= colour intensity))
- HDMI video output: Default setting: YCbCr 4:4:4 (We recommend to leave this unchanged. Changes should only be made by experts!)
- Digital audio output: Default setting: LPCM Out - If you use a digital audio amplifier, please change this setting to BS Out to enable the coaxial digital audio output of the receiver.

---

- **Setting of local time**

Setting the time of the receiver.

- Using GMT: On or off

GMT on:

- GMT difference: Selection of the time zone according to the indicated time difference and/or towns
- Summer time: When enabled, the summer or winter time will be set accordingly.
- Date: not enabled
- Time: not enabled

GMT off:

- GMT difference: not enabled
- Summer time: not enabled
- Date: enter current date
- Time: enter current time

- **Setting of the timer**

With the function timer, you can program the receiver to initiate a procedure, e.g. recording, at a defined time. 8 timer default programmings are available.

---

Sub-menu	Description
Timer number	Selection of timer number 1 - 8.
Timer mode	Type of repetition (once, daily, weekly, off). With the setting "Off", the timer will be disabled.
Timer service	VCR: At the programmed time, the receiver switches over to the programmed event (also in standby mode).
	USB recording: If an external USB storage medium has been connected correctly, you can program the time-controlled recording.
Wakeup channel	Channel selection
Wakeup date	Entry of the start date of the event
On time	Entry of the start time of the event
Duration	Entry of the length of the event

ð Save the input by confirming the "Save" box with the OK key.

- **PIN (factory password: 0000)**
  - Lock menu: When enabled, the most important menu items on the basic setting of the receiver are locked.
  - Channel lock (child lock): Enable / disable to activate / deactivate the lock of the channels locked

---

in the menu item "Edit channel list – TV channel list/radio channel list".


- New password: Selection of a new password. (Make sure you will remember the new password)
- Confirm password: Confirm the new password by repeating the entry.
- **OSD settings**
  - OSD Timeout: Menu display time
  - OSD Transparency: Menu transparency
- **Favourites**

Here, you can rename the favourites groups individually.

- **Other**
  - LNB power: Enabling and disabling LNB power. ON is preset. If you have your receiver connected to an antenna or 1-cable system without current supply, you must disconnect the current supply for the LNB.
  - Audio signal: Switching on and off the integrated acoustic satellite finder signal.

---

## Settings (symbol: tools)

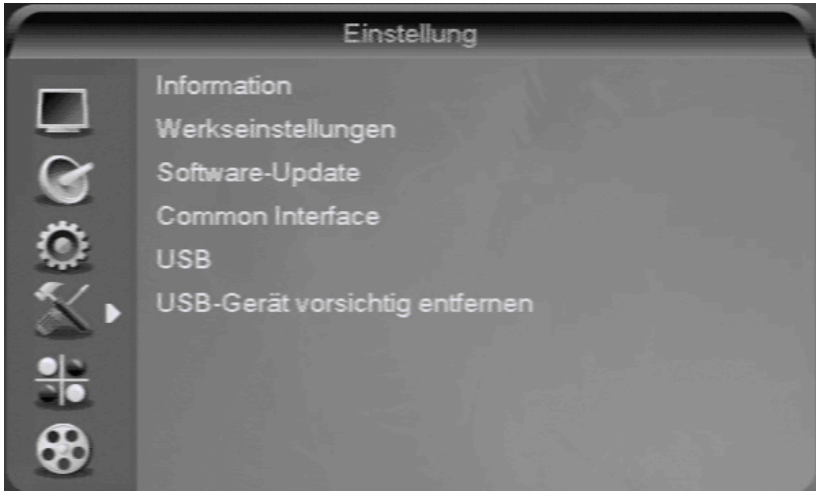

- **Information**

Technical details. Please have these data at hand when contacting our service hotline.

- **Default settings (requires input of password)**

Resetting receiver to the default settings. All changes made are cancelled. In the condition as supplied to the customer, the receiver starts in normal mode.


**Please note:**

**the default values are restored if you keep the standby key at the front side of your receiver pressed for more than 10 seconds.**


---


- **Software update (requires password input)**


- USB update: Software update via USB interface.

-  The quickest and safest method is a software update via the USB interface. Should you wish to do a software update, the method via the USB interface is preferable.

- Via satellite: The required data are preset. The procedure will be initiated if you confirm the "Start" box by pressing the OK key.

-  The software update via satellite has **nothing** to do with the storage of new TV channels. It is rather meant to update the system software of the receiver.

-  Normally, the software update is **not** required for a trouble-free operation of the receiver.

-  You must direct your satellite system towards the ASTRA1 19.2° East satellite to be able to update the software.

-  Updating the software may take up to an hour.

After the update it is recommended to load the default settings. Please note that by doing this, the channel list you created will be deleted.

- 
- Saving the list

Saving the current channel list to a connected USB storage medium. You can edit this list on a PC by using the channel-list editor. The edited list can be retransferred to the receiver via the following menu item.

- Loading the list

Retransferring an edited list via a USB storage medium.

- **Common Interface**

- ① The CI module and the smart card are not included in the scope of supply.

With the receiver, you can also watch unencrypted channels. For this purpose, you need the smart card of the channel provider and a corresponding CI module. The receiver has 2 CI module slots.

The term "Common Interface" stands for a common interface for the insertion of CI modules (also called CAM). This item informs on the inserted CI module. The menu is displayed depending on the inserted CI module.

To insert the CI module, you must first switch off the receiver completely with the mains switch on the rear side of the device. Then, open the cover of the common-interface slot on the front side of the receiver.

---

Now, insert the CI module into the common-interface slot as far as it will go. The pushbutton at the right side of the common-interface slot appears.



**Caution!**

If you insert the CI module or the smart card incorrectly, the receiver, the CI module or the smart card could be damaged. Please keep to the instructions of your manufacturer, provider or channel provider for your CI module and your smart card.

Now, insert the smart card into the CI module. Then, switch the receiver on again. The module will be initialised. Depending on the channel provider, a message will appear on your screen. Please follow these instructions.



Should you have a CI module, into which only the chip of your smart card must be inserted, you first must insert the chip and then the CI module into the common-interface slot.

Now, close the cover of the common-interface slot if no external USB storage medium is connected. With this, you protect the interior of your receiver from dust.




As long as you wish to watch the channel to be unencrypted, the CI module together with the smart card must be inserted correctly in the common-interface slot.

- 
- i** Before changing over to the standby mode or switching off the receiver with the mains switch on the rear side of the receiver, the CI module can stay inserted in the common-interface slot together with or without the smart card.

To take the CI module out of the common-interface slot, open the flap and press the pushbutton at the right side of the common-interface slot. Now, you can remove the CI module with the inserted smart card.

- 
- **USB (only enabled with a readable USB storage medium inserted)**

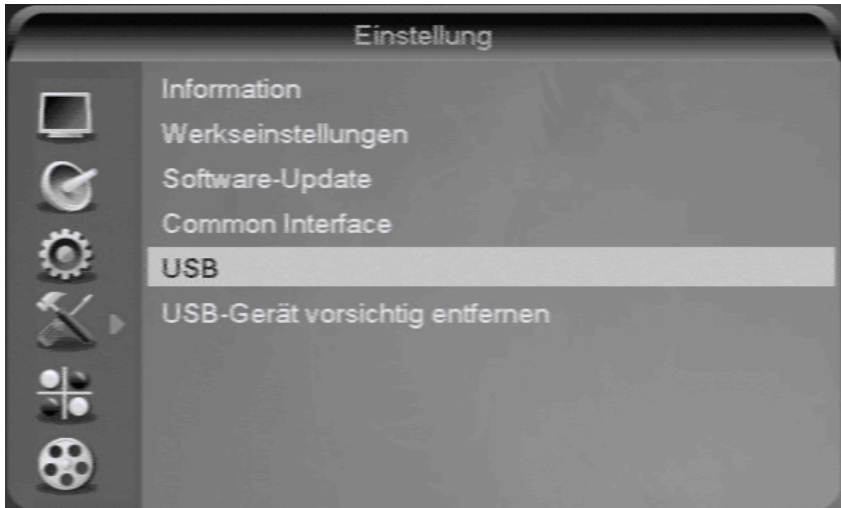

---

Insert a readable USB storage medium into the USB interface on the front side of the receiver. All readable files and folders will be displayed. The readable image files will further be displayed in the black field as preview, when they are marked.

- Readable image files (.jpg files)

Individual images displayed in the preview can be displayed individually by pressing the OK key.

If you want to see several images consecutively, you can create a slide show. After having created a slide show, it can be started by pressing the red function key "Show playlist". By pressing the green function key "Add playlist", you can add individual images to a slide show. Confirm the message popping up by selecting the option "Image". Now, the slide-show list appears with the selected image files.



---

By pressing the red function key "Play", the slide show will be started. By pressing the EXIT key, you will stop the slide show.

By pressing the green function key "Settings", you can adjust the slide show as you wish.



**Size:** With the setting "Real", the file will be reproduced in original size (maybe larger than the screen). With the setting "Full", the images will be shown in maximum screen size. Images smaller than the screen sizes will not be enlarged with the setting "Full". Images larger than the screen size will be reduced to screen size.

**Time:** Says how long images will stay on the screen during the slide show.

**Repeat:** Enable or disable the continuous reproduction of the slide show.

---

By pressing the yellow function key "Delete", you will remove the marked image file from the slide-show list. By pressing the blue function key "Delete all", you will remove all image files from the slide-show list.

- **Save removal of USB device**

For a safe removal of external USB storage media from the receiver.

---

## Games (symbol: game pieces)



The listed games are available on this receiver. Have much fun!

---

## External memory (symbol: film reel)



- ❗ For using this main menu item, a USB storage medium must be correctly inserted.
- ❗ Programmes recorded with encryption can be watched decrypted by inserting the corresponding CI module and smart card.

- **Recording manager**

Here, recorded programmes can be:


- renamed by pressing the red function key;
- locked by pressing the green function key (requires password input);

- 
- deleted by pressing the blue function key.

The functions "lock" and "delete" will only become active after confirming the prompt when exiting the submenu item.

The marked programme will be reproduced by pressing the OK key.

The following information bar appears:

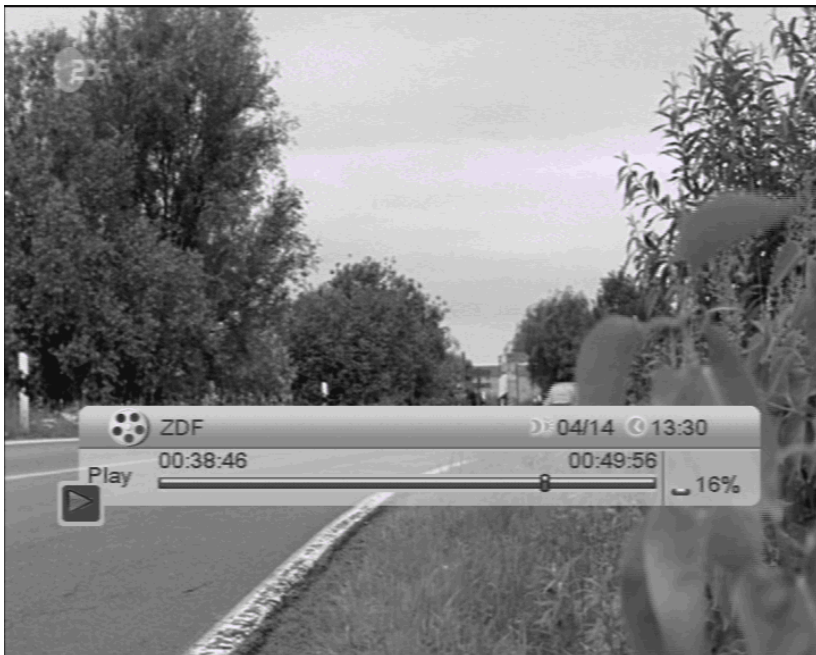

The headline of the bar shows the name of the programme on the left and the current date and time on the right. The bar shows the progress of the reproduction. The time indicated on the left shows the elapsed time of

---

the programme, the time indicated on the right shows the total time of the programme. The symbol on the left indicates the reproduction state. The percentage value refers to the disk space needed by the USB storage medium.

- **HDD information**

Information on the USB storage medium used.

- **HDD format (requires password input)**

Formatting of the USB storage medium used. Please note that when formatting, all data stored on the USB storage medium will get lost!

- **PVR setting**

- Time shift

With the time-shift function, you can stop a started programme and watch it later. The receiver records the programme on the USB storage medium. The displayed image will be frozen so that you can continue later at this point. To use this function, this menu item must be enabled. Press the PAUSE key once in normal mode. When you want to continue the programme, press the Play key. Now, you will see the programme from the point you have pressed the PAUSE key.

If this menu item is disabled, the image will just be frozen when pressing the PAUSE key.

- 
- ① The programme recorded via the time-shift function will not be stored permanently on the hard disk. By switching over to another channel or stopping the recording, the time-shift recording will be rejected. The time-shift function has a capacity of maximum 90 minutes.
  - Skip  
Determine the length of time steps during reproduction with the skip keys ◀◀▶▶. The minimum length is 30 seconds, the maximum length is 30 minutes.
  - TS file size  
Define the file size at which the recording on the external USB storage medium will be fragmented. The recommended size is 1 GB.
  - Time shift for recording  
Enabling/disabling time shift for the recording of programmes.
  - Recording subtitles: If this function is enabled, the subtitles (if offered) are recorded together with the programme.

---

## Keys with special functions

### Switching between TV and radio

With the “TV/Radio” key you can switch between TV and the radio function.

The receiver transmits a radio channel and shows a background image.

- ø To return from the radio transmission to the TV channel, press the "TV/Radio" key of the remote control.

### 0 - Sleep timer

You can go to the sleep timer in normal mode by pressing the 0 key.

You have the following setting options by pressing the 0 key again: off, 10, 30, 60, 90, 120 minutes. After this time, the receiver will be switched off automatically.

### Switch between TV and SAT

With the “TV/SAT” key you can switch between TV and satellite functions. (This function has to be provided by your TV set).

- ø Press the “TV/SAT” key until you have set the desired function.

---

## **CH- / CH+**

Scrolling channels up and down

## **VOL+ / VOL-**

Increase / decrease volume.

## **MENU**

Invoking a menu.

## **RECALL**

By pressing the "RECALL" key, you will change over to the previously selected channel.

## **P+ / P-**

Normal mode: without function

With active channel list: switches between the channel lists.

## **TEXT**

Teletext is an information system displaying Teletext on your TV set. For Teletext reception, the selected channel must support this function. The TXT symbol appears when channels are changed. Comparing our receiver to others you will notice that our Teletext is extremely fast.

• Press the "TEXT" key to start Teletext.

• For switching off Teletext, press the "EXIT" or "TEXT" key.

---

## **EXIT**

For exiting menus and/or applications.

## **OK**

Normal mode: Invoking the channel list.

Menu / applications: Confirmation



Normal mode: Volume adjustment

With active channel list: Jumping 10 channels up or down.

In a menu: Cursor function



Normal mode: Switching channels one by one.

With active channel list: Switching channels one by one.

In a menu: Cursor function

## **FAV**

ð Press the FAV key. The screen shows the existing favourites lists.

ð Select one and confirm with the OK key.

---

## EPG

Electronic Program Guide.



The EPG provides programme information in table form, if provided by the broadcasting station.

It shows information on broadcasting times and programmes.

With the ▶, ◀, ▼ and ▲ keys you can move the marking in the EPG table.

You will get additional information on an event/programme by marking it and confirming with the OK key. An information window opens.

With the green function key "Timer", you can take over the marked event directly to the timer. The timer is explained in menu item "System settings – Timer settings".

---

With the red function key "Thereafter" you will get information on programmes broadcasted during the next days.



In the footer, you can select the following commands with the OK, ► and ◀ keys:



Back to the previous page (EXIT).



Back to the current time.



Scrolling between events



Scrolling in 2 hour intervals



Scrolling daily between the events.

---

## **V-FMT**

Direct format switching of the video output signal.


## **TIMER**

Direct access to the timer function.

## **INFO - acoustic signal for directing the satellite antenna**

For use, no external USB storage medium must be connected.

Press the INFO key. Current programme information is displayed. If you press the INFO key again while the programme information is on the screen, you will get the current reception parameters. Among others, the signal strength and quality will be displayed. The acoustic signal will sound if this function is enabled in the menu "System settings – Other – Acoustic signal".

-  A stronger and higher signal indicates a better direction of the antenna.

---

## **SUBT**

If a channel offers a digital subtitle signal, you can switch it on and off with this key.

## **AUDIO**

Selection of the audio track.

## **FIND**

If you are searching for a determined channel, you can type it in letter by letter.

---

## Keys with PVR functions



Pressing once: Direct recording of the current programme.

Pressing again: Setting of the recording time in hh:mm.



Pressing once: Stopping the recording after having confirmed the prompt.



Play key. By pressing this key, the selected programme will be started or continued.



PVR mode: Interruption of the reproduction

Normal mode: Enables time shift if the function Time shift in the menu item "External memory – PVR settings – Time shift" is enabled. If it is disabled, the current programme will just be "frozen".



Rewind / fast forward

By pressing this key several times, speed changes.



Skip key in play mode.



Slow motion (forward)



Slow motion (back)

## **MOVIE**

Direct access to recorded programmes. Only available if the external storage medium has been connected correctly and if programmes have been recorded.

## **USB**

Invoking the USB directory.

---

## Editing of recorded programmes

Press the INFO key during the reproduction of a recorded programme. A bar appears as shown in the following figure. The bar provides specific information on the current reproduction. After approx. 5 seconds, the bar will disappear if the receiver does not receive any command.



By pressing the green function key of your remote control, you can bookmark the current point of the reproduction. The bookmarks are indicated by red triangles in the progress bar. Further bookmarks can be set wherever you wish. E.g., you can mark an unwanted part of the recorded programme at the beginning and end and skip it by pressing the blue function key.

The bookmarks set remain stored for this programme.

---

## Cleaning



### Caution!

The receiver must not become wet. Never clean it with a wet cloth.

Do not use any cleaning agent containing solvents like petrol or thinners for cleaning. These agents may damage the surface of the casing.

- Clean the casing of the receiver with a **dry** cloth.
- Clean the display of the receiver with a slightly wet cloth.

## Tips & tricks/trouble shooting

Symptom	Possible cause and remedy
Satellite cannot be found, or no signal	<p>Example: Astra1 19.2° East 1 key (default setting: “ARD“) “INFO“ key (“ARD“, FR11837) Signal AND quality are both at 0%</p> <p>Direct vertical reflector to the south. Turn some millimetres to the left, wait approx. 3 seconds and repeat, until signal AND quality are displayed. With a signal of approx. 60%, the black background disappears and the TV image will be displayed.</p> <p>For changing the satellite please select a current channel out of the preset channel list and then press the INFO key.</p>
Frontal display dark	The mains cable is not connected. Connect the mains cable with the power source.
No sound or image, but receiver menus are displayed	<p>The antenna is not directed towards the satellite. Direct the antenna properly.</p> <p>No signal (with symbol). Check the cable connection from the LNB to the receiver and from the receiver to the connected equipment. Direct the antenna.</p>
Frontal display shows channel	The system is not connected properly. Check connection of the SCART cable

location. The TV set does not display any image.	The TV set is not in AV mode. Switch the TV set to the respective AV input.
Poor image, blocking error, formation of small blocks, sound stops	The antenna is not directed exactly towards the satellite. Direct the antenna more precisely. For this purpose, use the "Info" key of the remote control. The signal strength will be displayed for directing the antenna properly.
	The LNB is defective. Replace the LNB.
No image, no sound, signal strength and signal quality OK	The satellite antenna has been directed to a <b>wrong</b> satellite.
Bad reception of: DSF, etc.	Wireless telephone is disturbing (DECT standard). Move your telephone to another place.
System crash (receiver cannot be operated anymore.)	Should it come to the improbable case of a system crash, separate the receiver from the mains supply. Connect it again after 10 seconds. With this, the problem can be solved usually. Please note: a software crash is not a malfunction and no guarantee will apply. For technical equipment (e.g. also PC, radio network, etc.) a software crash can be solved simply and quickly by following this procedure.
The remote control does not	The batteries are exhausted. Replace the batteries.

---

work.	The remote control is not directed properly. Aim the remote control towards the front side of the receiver and ensure that there is no obstacle between the remote control and the receiver.
Channel has received new frequency and is not transmitted anymore with the current data	Delete the corresponding channel and carry out an automatic scan.
Exit favourites list	Press the FAV key and the 1 key.
Password	The default password is 0000.
Cannot remember personal password	Please contact the service hotline if you have forgotten your personal password.
Operating manual in additional languages	On the website <a href="http://www.comag-ag.de">www.comag-ag.de</a> this operating manual is available for download in additional languages.
Channel-list editor	On the website <a href="http://www.comag-ag.de">www.comag-ag.de</a> a channel-list editor is available for download.
Default value	the default settings are restored if you keep the standby key at the front side of your receiver pressed for more than 10 seconds. Caution! By doing this, your personal settings will get lost.
External USB storage medium not recognised.	Switch off the receiver with the mains switch. Insert the USB storage medium again. Switch over the receiver to normal mode again.

---

The common USB storage media known by us are compatible with this receiver. For larger USB hard disks you should use an external power pack following the operating instructions of the USB hard disk.

If a problem cannot be rectified in spite of this, please contact your specialized dealer or the manufacturer.

 
---

## Disposal



European Community Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE)

Never throw the receiver into normal household waste. Ask your municipal authorities or local government about different methods for disposing of the equipment in an eco-friendly and proper manner.



Never throw the batteries into normal household waste. Batteries may contain toxic agents. Therefore, it is essential to dispose of the batteries according to the prevailing statutory regulations and the statutory return obligation. Ask your municipal authorities or local government about different methods of disposal in an eco-friendly and proper manner. Hand over used batteries to a collection centre. With this you will make a positive contribution to pollution control.

## Specifications

<b>Receiver</b>	
Dimensions in mm (W x D x H)	310 x 200 x 50
Weight in grammes	Receiver 1,400 g Remote control 80 g (without batteries)
Range of input frequency	950 MHz ~ 2150 MHz
IF band width	55 MHz / 8 MHz (below 5MS/s)
LNB power supply	13/18 V GS, 0.30 A max. Overload protection
LNB control	22 KHz ± 2 KHz, 0.6 V pp ± 0.2 V
DiSEqC control	Version 1.0, Version 1.2
Symbol rate	1 ~ 45 MS/s
Input speed	Max. 15 Mbit/s
Error correction (FEC)	1/2, 2/3, 3/4, 5/6, 7/8, auto
Aspect ratio	4:3 letterbox, 4:3 PanScan, 16:9
Video resolution	720 x 576 (Pal), 720 x 480 (NTSC), 1280 x 720, 1920 x 1080
Audio mode	Left, right, stereo, AC3 digital sound
<b>Connection options</b>	
LNB IF input	Type F, IEC 169-24
TV SCART (output only)	Video CVBS, Audio L, R
VCR SCART (output and input)	Video CVBS, Audio L, R
RCA (CINCH)	Audio L,R

---

COAXIAL	Digital audio output
HDMI interface	Connection for digital transmission of audio and video signals
YPbPr	Component output
USB	USB interface
<b>Power supply</b>	
Input voltage power pack	100-240 V ~, 50/60 Hz
Power consumption	approx. 25W (operation with single LNB) approx. 2W (standby)
Operating temperature	0 °C ~ +40 °C
Storage temperature	- 40 °C ~ + 65 °C

---

## **Manufacturer**

COMAG Handels AG  
Zillenhardtstraße 41  
D-73037 Göppingen (Germany)  
Germany

Telephone: 0049 (0)7161 / 5 03 06 – 0  
Fax: 0049 (0)7161 / 5 03 06 – 11  
Website: [www.comag-ag.de](http://www.comag-ag.de)

---

**Dear customer,**

Past experience has shown that many complaints can be settled through a simple telephone call.

In case problems should arise with your device we kindly ask you to contact our service hotline first. Proceeding like this will save you time and possible irritation.

Our hotline personnel will be glad to help you and explain the exact procedure of guarantee handling, should it become necessary to send in your device.

**Service hotline: +49(0)7161 / 5030633**

**Monday – Friday from 8.00 to 12.00 a.m. and from 1.00 to 5.00 p.m.**

**E-mail: [hotline@comag-ag.co.uk](mailto:hotline@comag-ag.co.uk)**

---

## Guarantee

The guarantee for the digital satellite receiver of COMAG Handels AG is in conformity with the prevailing statutory regulations at the time of purchasing the product.

Modifications of the device lead to an extinction of the manufacturer's guarantee obligation. A crash of the operating software is not considered a malfunction and no guarantee will apply.

Should a connected USB storage medium not be compatible with the receiver, it will not be covered by the guarantee.

---

## Declaration of conformity

The manufacturer hereby declares conformity with the - following guidelines and standards for this product:

Low-voltage guideline 2006/95/EC

- EN 60065

Guideline on electromagnetic compatibility, 2004/108/EC

- EN 55013
- EN 55020
- EN 61000-3-2
- EN 61000-3-3

Equipment type/model: Digital satellite receiver SL  
100HD PVR ready 2CI

Göppingen, 01/09/2008  
COMAG Handels AG

---

## Glossary

<b>AC</b>	Alternating Current Connection for alternating current
<b>DC</b>	Direct Current Connection for direct current
<b>Cinch connector</b>	Coaxial connector for connecting TV set or stereo system.
<b>DiSEqC</b>	Digital Satellite Equipment Control Digital system, with which the receiver can control different components of the external unit. It is especially used for selecting from multiple satellite positions (for example Astra and Eutelsat).
<b>EPG</b>	Electronic Programme Guide
<b>F connector</b>	Coaxial connector for LNB antenna cable.
<b>FTA</b>	Free-to-air services Free-of-charge services that can be received without a special decoder.
<b>LNB</b>	Low Noise Block Amplifier / Converter A device at the centre of the antenna, which converts high-frequency incoming signals from satellites into a low-frequency range and amplifies them simultaneously.
<b>Mute</b>	Key of the remote control for turning off sound
<b>OSD</b>	On-screen display Menu control displayed on the screen.

---

<b>PID</b>	Identification number of a received data stream The PIDs ensure that a channel is received completely.
<b>Receiver</b>	Receiver unit, which converts signals from the antenna into video and audio signals.
<b>SCART</b>	A 21-pole connector for connecting the TV set to the receiver.
<b>Swap function</b>	Switches between current channel and channel last watched.
<b>Transponder</b>	Satellite frequency. Several digital channels can be broadcasted simultaneously on a transponder.
<b>VCR</b>	Abbreviation for Video Cassette Recorder.